



# Development of Direct-Use Projects

## Preprint

John W. Lund, P.E.

*To be presented at the Stanford University Geothermal Reservoir  
Engineering Workshop  
Stanford, California  
January 31 – February 2, 2011*

**NREL is a national laboratory of the U.S. Department of Energy, Office of Energy Efficiency & Renewable Energy, operated by the Alliance for Sustainable Energy, LLC.**

**Conference Paper**  
NREL/CP-5500-49948  
January 2011

Contract No. DE-AC36-08GO28308

## NOTICE

The submitted manuscript has been offered by an employee of the Alliance for Sustainable Energy, LLC (Alliance), a contractor of the US Government under Contract No. DE-AC36-08GO28308. Accordingly, the US Government and Alliance retain a nonexclusive royalty-free license to publish or reproduce the published form of this contribution, or allow others to do so, for US Government purposes.

This report was prepared as an account of work sponsored by an agency of the United States government. Neither the United States government nor any agency thereof, nor any of their employees, makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represents that its use would not infringe privately owned rights. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States government or any agency thereof. The views and opinions of authors expressed herein do not necessarily state or reflect those of the United States government or any agency thereof.

Available electronically at <http://www.osti.gov/bridge>

Available for a processing fee to U.S. Department of Energy and its contractors, in paper, from:

U.S. Department of Energy  
Office of Scientific and Technical Information

P.O. Box 62  
Oak Ridge, TN 37831-0062  
phone: 865.576.8401  
fax: 865.576.5728  
email: <mailto:reports@adonis.osti.gov>

Available for sale to the public, in paper, from:

U.S. Department of Commerce  
National Technical Information Service  
5285 Port Royal Road  
Springfield, VA 22161  
phone: 800.553.6847  
fax: 703.605.6900  
email: [orders@ntis.fedworld.gov](mailto:orders@ntis.fedworld.gov)  
online ordering: <http://www.ntis.gov/help/ordermethods.aspx>

Cover Photos: (left to right) PIX 16416, PIX 17423, PIX 16560, PIX 17613, PIX 17436, PIX 17721



Printed on paper containing at least 50% wastepaper, including 10% post consumer waste.

# DEVELOPMENT OF DIRECT-USE PROJECTS

John Lund  
National Renewable Energy Laboratory  
1617 Cole Blvd.  
Golden, Colorado, 80401, United States  
e-mail:john.lund@nrel.gov

## **ABSTRACT**

A geothermal direct-use project utilizes a natural resource, a flow of geothermal fluid at elevated temperatures, which is capable of providing heat and/or cooling to buildings, greenhouses, aquaculture ponds, and industrial processes. Geothermal utilization requires matching the varied needs of the user and characteristics of the resource in order to develop a successful project. Each application is unique; guidelines are provided for the logical steps required to implement a project.

Recommended temperature and flows are suggested for spas and pools, space and district heating, greenhouse and aquaculture pond heating, and industrial applications. Guidelines are provided for selecting the necessary equipment for successfully implementing a direct-use project, including downhole pumps, piping, heat exchangers, and heat convectors.

Additionally, the relationship between temperature, flow rate, and the use of heat exchangers to provide heat to a space with hot water or hot air is provided for a number of applications, with suggested “rules of thumb”.

## **INTRODUCTION**

A geothermal direct-use project utilizes a natural resource, a flow of geothermal fluid at elevated temperatures, which is capable of providing heat and/or cooling to buildings, greenhouses, aquaculture ponds, and industrial process (Lienau 1998). Geothermal utilization requires a unique blending of skills to locate and access a resource, and to concurrently match the varied needs of the user in order to develop a successful project. Each resource development projects is unique; and the development of a project should be approached in phases so as to minimize risk and costs. The size of the project determines the amount of exploration and development of the resource that can be economically justified. The risk is high for heating a single home, as outside of gathering data on adjacent hot springs and wells and use, the well becomes the exploration tool and, with exploration success, provides the necessary energy to the project. Larger projects, such as district heating and industrial applications justify more

investigation to better characterize the resource and reduce the risk.

The first phase generally involves securing rights to the geothermal resource. This includes information on ownership, leasing, agencies involved, water rights, injection requirements, competition with adjacent geothermal users, and any potential royalty payments. The second phase involves interdisciplinary activities of geology, geochemistry, geophysics, and drilling and reservoir engineering. These exploration activities are usually expensive; the economics of a direct-use activity often will not support an extensive exploration program. However, minimum exploration and resource characteristics that are necessary include depth to the resource data, temperature, flow-rate, and drawdown and chemistry of the fluid to provide information to determine if a project is feasible and will meet the needs of the proposed activity.

The preliminary and conceptual design of a direct-use project could start during the reservoir testing and evaluation phase, however, depending on the risk and financing issues, this phase may have to wait until the reservoir characteristics are confirmed.

During the design phase, special consideration must be given to the design and selection of equipment such as well pumps, piping, heat exchangers, and space heating equipment. The cost of all these pieces of equipment must be considered, along with potential corrosion and scaling problems, to make the project viable.

## **SELECTING THE POTENTIAL USE OF THE RESOURCE**

One of the frequent questions that people ask is how to use a geothermal resource. The answer has many parts to it. Answers to these questions will influence the response:

- (1) What is the estimated (or known) temperature and flow rate of the resource?
- (2) What is the chemistry of the resource?
- (3) What potential markets do you have for the energy, and what would be the expected income?
- (4) Do you have the experience, or are you willing to hire experienced people to run the project?

- (5) Do you have financing, and is the estimated net income enough to justify the investment?
- (6) Do you own, or can you lease, the property and the resource, and are there limitations on its use?

Figure 1 is an example of a chart that can be used to match resource temperature with potential uses, and can be used to narrow choices. A brief discussion of some of the more common uses for direct-use geothermal is presented below.

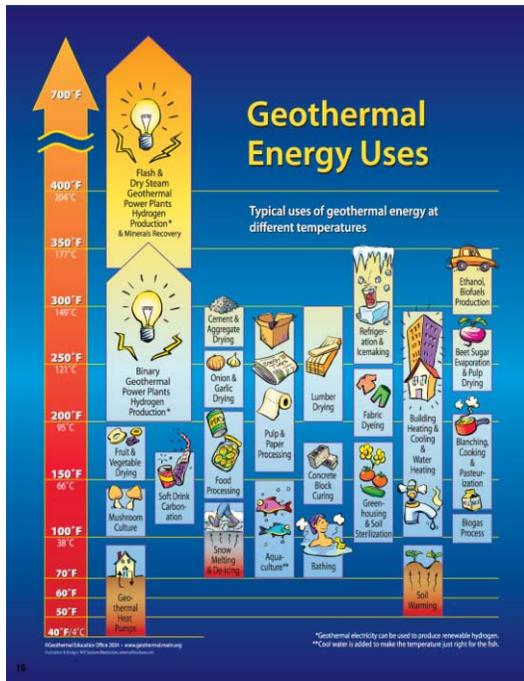


Figure 1. Various geothermal uses, including power generation and direct-use, related to their appropriate temperature range (courtesy of Geothermal Education Office)

### Spas and Pools

People have used geothermal water and mineral waters for bathing and their health for many thousands of years. Balneology, the practice of using natural mineral water for the treatment and cure of disease, also has a long history. A spa originates at a location mainly due to the water from a spring or well. The water, with certain mineral constituents and often warm, give the spa certain unique characteristics that will attract customers. Associated with most spas is the use of muds (peoloids) which are either found at the site or imported from special locations. Drinking and bathing in the water, and using the muds are thought to give certain health benefits to the user. Swimming pools have desirable temperature at 27°C; however, this will vary from culture to culture by as much as 5°C. If the

geothermal water is higher in temperature, some sort of mixing or cooling by aeration or in a holding pond is required to lower the temperature, or it can first be used for space heating, and then cascaded into the pool. If the geothermal water is used directly in the pool, a flow through process is necessary to replace the “used” water on a regular basis. In many cases, the pool water must be treated with chlorine, thus, it is more economical to use a closed loop system for the treated water and use the geothermal water to provide heat through a heat exchanger (Lund 2000).

### Space and District Heating

District heating involves the distribution of heat (hot water or steam) from a central location through a network of pipes to individual houses or blocks of buildings. The distinction between district heating and space heating systems is that space heating usually involves one geothermal well per structure. An important consideration in district heating projects is the thermal load density, or the heat demand divided by the ground area of the district. A high heat density, generally above 1.2 gigajoules/hour/hectare (GJ/hr/ha) or a favorability ratio of 2.5 GJ/ha/yr is recommended. Often fossil fuel peaking is used to meet the coldest period, rather than drilling additional wells or pumping more fluids, as geothermal can usually meet 50% of the load 80% to 90% of the time, thus improving the efficiency and economics of the system (Bloomquist, et al. 1987). Geothermal district heating systems are capital intensive. The principal costs are initial investment costs for production and injection wells, downhole and circulation pumps, heat exchangers, pipelines and distribution networks, flow meters, valves and control equipment, and building retrofitting. The distribution network may be the largest single capital expense, at approximately 35% to 75% of the entire project cost. Operating expenses, however, are in comparison lower and consist of pumping power, system maintenance, control, and management. The typical savings to consumers range from approximately 30% to 50% per year of the cost of natural gas (Lienau 1998).

### Greenhouses

A number of commercial crops can be raised in greenhouses, making geothermal resources in cold climates particularly attractive. Crops include vegetables, flowers (potted and cut), house plants, and tree seedlings. Greenhouse heating can be accomplished by several methods: finned pipe, unit heater and fan coil units delivering heat through plastic tubes in the ceiling or under benches, radiant floor systems, bare tubing, and a combination of these methods. The use of geothermal energy for heating can

reduce operating costs and allow operation in colder climates where commercial greenhouses would not normally be economical. The economics of a geothermal greenhouse operation depends on many variables, such as the type of crop, climate, resource temperature, type of structure, market, etc. Peak heating requirements in a temperate climate zone are around 1.0 megajoules per square meter (MJ/sq. m), and a 2.0 ha facility would require 20 GJ/yr (5.5 megawatt thermal (MWt)) of installed capacity). With a load factor of 0.50, the annual energy consumption would be around 90 terajoules per year (TJ/yr) (25 million kilowatt hours per year (kWh/yr)).

### **Aquaculture**

Aquaculture involves the raising of freshwater or marine organisms in a controlled environment to enhance production rates. The principal species raised are aquatic animals, such as catfish, bass, tilapia, sturgeon, shrimp, and tropical fish. The application temperature in fish farming depends on the species involved, ranging from 13° to 30°C, and the geothermal water can be used in raceways, ponds, and tanks. The benefit of a controlled rearing temperature in aquaculture operations can increase growth rated by 50% to 100%, thus increasing the number of harvests per year. A typical outdoor pond in a temperate climate zone would require 2.5 MJ/hr/sq. m, and a 2.0 ha facility would require an installed capacity of 50 GJ/yr (14 MWt). With a load factor of 0.60, the annual heating requirement would be 260 TJ/yr (73 million kWh/yr). Water quality and disease control are important in fish farming and need to be considered when using geothermal fluids directly in the ponds.

### **Industrial**

Industrial applications mostly need higher temperature geothermal resources as compared to space heating, greenhouses, and aquaculture projects. Examples of industrial operations that use geothermal energy include heap leaching operations to extract precious metals (110°C), and dehydration of vegetables in the United States (130°C); diatomaceous earth drying in Iceland (180°C); and pulp and paper processing in New Zealand (205°C). Drying and dehydration may be the two most important process uses of geothermal energy. A variety of vegetable and fruit products can be considered for dehydration at geothermal temperatures, such as onions, garlic, carrots, pears, apples, and dates. Industrial processes also make more efficient use of the geothermal resources as they tend to have high load factors in the range of 0.4 to 0.7. High load factors reduce the cost per unit of energy used.

### **SELECTING THE EQUIPMENT**

It is often necessary to isolate the geothermal fluid from the user side to prevent corrosion and scaling. Care must be taken to prevent oxygen from entering the system (geothermal water is normally oxygen free), and dissolved gases and minerals, such as boron, arsenic, and hydrogen sulfide, must be removed or isolated as they are harmful to plants and animals. On the other hand, carbon dioxide, which often occurs in geothermal water, can be extracted and used for carbonated beverages or to enhance growth in greenhouses. The typical equipment for a direct-use system is illustrated in Figure 2, and includes downhole and circulation pumps, heat exchangers (normally the plate type), transmission and distribution lines (normally insulated pipes), heat extraction equipment, peaking or back-up plants (usually fossil-fuel fired) to reduce the use of geothermal fluids and reduce the number of wells required, and fluid disposal systems (injection wells). Geothermal energy can usually meet 80% to 90% of the annual heating or cooling demand, yet is only sized for 50% of the peak load.

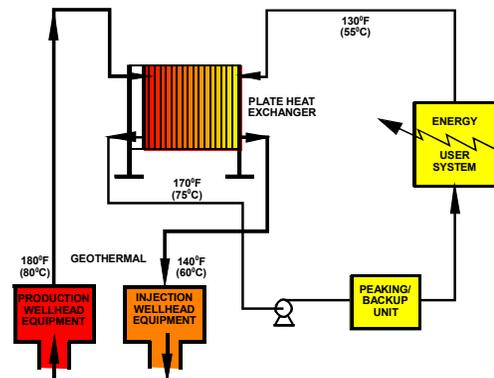


Figure 2. Typical direct-use geothermal heating system configuration

### **Downhole Pumps**

Unless the geothermal well is artesian, downhole pumps are needed, especially in large-scale direct utilization systems. Downhole pumps may be installed not only to lift fluid to the surface, but also to prevent the release of gas and the resultant scale formation. The two most common types of downhole pump systems are line shaft pump systems and submersible pump systems.

The line shaft pump system consists of a multi-stage downhole centrifugal pump, a surface mounted motor, and a long driveshaft assembly extending from the motor to the pump bowls. Most are enclosed, with the shaft rotating within a lubrication column which is centered in the production tubing. This assembly allows

the bearings to be lubricated by oil, as hot water may not provide adequate lubrication. A variable-speed (frequency) drive set just below the motor on the surface can be used to regulate flow instead of just turning the pump on and off. If a line shaft pump is used, special allowances must be made for the thermal expansion of various components and for oil lubrication of the bearings.

The electric submersible pump system consists of a multi-stage downhole centrifugal pump, a downhole motor, a seal section (also called a protector) between the pump and motor, and electric cable extending from the motor to the surface electricity supply.

Both types of downhole pumps have been used for many years for cold water pumping and more recently in geothermal wells (line shafts have been used on the Oregon Institute of Technology campus in 89°C water for 55 years). The line shaft pumps are preferred over the submersible pump in conventional geothermal applications for two main reasons: the line shaft pump costs less and has a proven track record. However, for setting depths exceeding 250 m, a submersible pump is required.

### **Piping**

The fluid state in transmission lines of direct-use projects can be liquid water, steam vapor, or a two-phase mixture. These pipelines carry fluids from the wellhead to either a site of application or a steam-water separator. Thermal expansion of metallic pipelines heated rapidly from ambient to geothermal fluid temperatures (which could vary from 50° to 200°C) causes stress that must be accommodated by careful engineering design.

The cost of transmission lines and the distribution networks in direct-use projects is significant. This is especially true when the geothermal resource is located at great distance from the main load center; however, transmission distances of up to 60 kilometers (km) have proven economical for hot water (i.e., the Akranes project in Iceland (Ragnarsson and Hrolfsson 1998)) where asbestos cement (AC) covered with earth has been successful. Carbon steel is now the most widely used material for geothermal transmission lines and distribution networks; especially if the fluid temperature is over 100°C. Other common types of piping material are fiberglass reinforced plastic (FRP) and AC. The latter material, used widely in the past, cannot be used in many systems today due to environmental concerns; thus, it is no longer available in many locations. Polyvinyl chloride (PVC) piping is often used for the distribution network and for un-insulated waste disposal lines where temperatures are

well below 100°C. Cross-linked polyethylene pipe (PEX) have become popular in recent years as they can tolerate temperatures up to 100°C and still take pressures up to 550 kiloPascal (kPa). However, PEX pipe is currently only available in sizes less than 5 cm in diameter.

Conventional steel piping requires expansion provisions, either with bellows arrangements or by loops. A typical piping installation would have fixed points and expansion points about every 100 m. In addition, the piping would have to be placed on rollers or slip plates between points. When hot water metallic pipelines are buried, they can be subjected to external corrosion from groundwater and electrolysis. They must be protected by coatings and wrappings. Concrete tunnels or trenches have been used to protect steel pipes in many geothermal district heating systems. Although expensive (generally over U.S.\$300 per m of length), tunnels and trenches have the advantage of easing future expansion, providing access for maintenance and a corridor for other utilities, such as domestic water, waste water, electrical cables, phone lines, etc.

Supply and distribution systems can consist of either a single-pipe or a two-pipe system. The single-pipe is a once-through system where the fluid is disposed of after use. This distribution system is generally preferred when the geothermal energy is abundant and the water is pure enough to be circulated through the distribution system. In a two-pipe system, the fluid is recirculated so the fluid and residual heat are conserved. A two-pipe system must be used when mixing of spent fluids is called for, and when the spent cold fluids need to be injected into the reservoir. Two-pipe distribution systems cost typically 20% to 30% more than single-piped systems.

The quantity of thermal insulation of transmission lines and distribution networks will depend on many factors. In addition to minimizing the heat loss of the fluid, the insulation must be waterproof and watertight because moisture can destroy the value of any thermal insulation and cause rapid external corrosion. Aboveground and overhead pipeline installations can be considered in special cases. Considerable insulation is achieved by burying hot water pipelines. For example, burying bare steel pipe results in a reduction in heat loss of about one-third as compared to above ground in still air. If the soil around the buried pipe can be kept dry, then the insulation value can be retained. Carbon steel piping can be insulated with polyurethane foam, rock wool or fiberglass. Below ground, such pipes should be protected with a PVC jacket; aboveground, aluminum can be used. Generally, 2.5 to 10 cm of insulation is adequate. In two-pipe systems, the supply and return

lines are usually insulated, whereas, in single-pipe systems, only the supply line is insulated. At flowing conditions, the temperature loss in insulated pipelines is in the range of 0.1 to 1.0°C/km, and in un-insulated lines, the loss is 2 to 5°C/km (in the approximate range of 5 to 15 Liters per second (L/s) flow for 15-cm diameter pipe (Ryan 1981)). It is less for larger diameter pipes. For example, less than 2°C loss is experienced in the new aboveground 29-km-long and 80 and 90 cm diameter line (with 10 cm of rock wool insulation) from Nesjavellir to Reykjavik in Iceland. The flow rate is around 560 L/s and takes seven hours to cover the distance. Un-insulated pipe costs about half of insulated pipe, and is used where temperature loss is

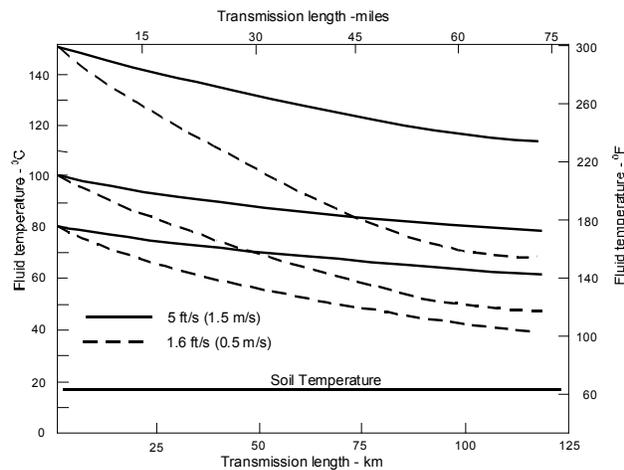


Figure 3. Temperature drop in hot water transmission line (Ryan 1981)

not critical. Pipe material does not have a significant effect on heat loss; however, the flow rate does. At low flow rates (off peak), the heat loss is higher than at greater flows. Figure 3 shows fluid temperatures, as a function of distance, in a 45-cm diameter pipeline, insulated with 50 cm of urethane foam.

Steel piping is used in most case, but FRP or PVC can be used in low-temperature applications. Aboveground pipelines have been used extensively in Iceland, where excavation in lava rock is expensive and difficult; however, in the United States, below ground installations are more common to protect the line from vandalism and eliminate traffic barriers. A detailed discussion of these various installations can be found in Gudmundsson and Lund (1985).

## Heat Exchangers

The principal heat exchangers used in geothermal systems are the plate, shell-and-tube, and downhole types.

The plate heat exchanger consists of a series of plates with gaskets held in a frame by clamping rods. The counter-current flow and high turbulence achieved in plate heat exchangers provides for efficient thermal exchange in a small volume. In addition, they have the advantage when compared to shell-and-tube exchangers of occupying less space, can easily be expanded when addition load is added, and cost 40% less. The plates are usually made of stainless steel; although, titanium is used when the fluids are especially corrosive. Plate heat exchangers are commonly used in geothermal heating situations worldwide.

Shell-and-tube heat exchangers may be used for geothermal applications, but are less popular due to problems with fouling, greater approach temperature (difference between incoming and outgoing fluid temperature), and larger size.

Downhole heat exchangers eliminate the problem of disposal of geothermal fluid since only heat is taken from the well. However, their use is limited to small heating loads, such as the heating of individual homes, small apartment homes, or businesses. The exchanger consists of a system of pipes or tubes suspended in the well through which secondary water is pumped or allowed to circulate by natural convection. In order to obtain maximum output, the well must be designed to have an open annulus between the wellbore and casing, and perforations above and below the heat exchanger surface. Natural convection circulates the water down inside the casing, through the lower perforations, up in the annulus, and back inside the casing through the upper perforations (Culver and Lund 1999). The use of a separate pipe, or promoter, has proven successful in older wells in New Zealand to increase the vertical circulation (Dunstall and Freeston 1990).

## Convectors

Heating of individual rooms and buildings is achieved by passing geothermal water (or a heated secondary fluid) through heat convectors (or emitters) located in each room. The method is similar to that used in conventional space heating systems. Three major types of heat convectors are used for space heating: 1) forced air, 2) natural air flow using hot water or finned tube radiators, and 3) radiant panels. All these can be adapted directly to geothermal energy or converted by retrofitting existing systems.

**DIRECT-USE TEMPERATURE REQUIREMENTS**

The design of mechanical systems involving heat transfer, such as direct-use geothermal systems, is heavily influenced by temperature. Temperature difference (delta T or  $\Delta T$ ) is particularly important as it frequently governs feasibility, equipment selection, and flow requirements for the system. Rafferty (2004) addresses these issues with several “rules of thumb” that are summarized below.

Two main temperature differences ( $\Delta T$ ) influence the feasibility, flow requirements, and the design of the heating equipment, as illustrated in Figure 4. The first is the difference between the entering geothermal water ( $T_{ge}$ ) and the process temperature ( $T_p$ ), which determines the feasibility of the system. The greater the  $\Delta T$  the smaller the size and thus, the lower the cost of the heat transfer equipment. The second is the difference between the temperature of the geothermal water entering the system ( $T_{ge}$ ) and leaving the system ( $T_{go}$ ). This  $\Delta T$  determines the geothermal water flow rate necessary to provide the heat to the system. The greater the  $\Delta T$  the smaller the required flow rate. The leaving geothermal temperature cannot be lower than the process temperature. The application of these “Rules of Thumb” is described below for pool and aquaculture pond heating, and for greenhouse and building space heating.


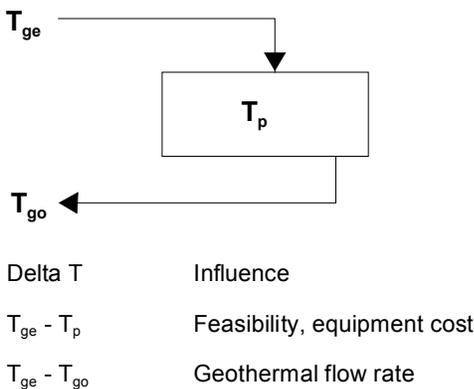


Figure 4. Fundamental direct-use temperature differences (Rafferty, 2004)

**Pool and Aquaculture Pond Heating**

Pond and pool heating is one of the simplest geothermal applications, as it usually uses the geothermal water directly in the pond/pool to provide the required heat demand. This is illustrated in Figure 5 (Rafferty 2004) where 50°C geothermal water is supplied to heat the pool water to 30°C. Thus, the  $\Delta T$  is 20°C, and using a


flow rate of 10 L/s, the energy supplied would be 837 kW (3.0 GJ/hr) ( $kW = L/s \times \Delta T \times 4,184$ ). If the supply temperature were instead 40°C the flow rate would have to be doubled to provide the same amount of energy, four times at 35°C, and eight times at 32.5°C.

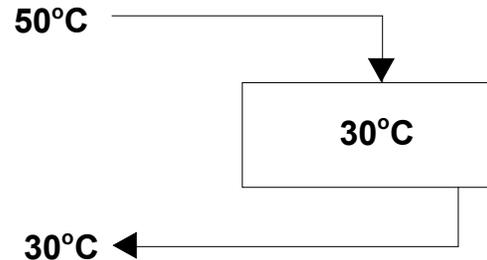

Flow requirement proportional to  $T_{ge} - T_{go}$   
 At 40°C, flow = 2x  
 At 35°C, flow = 4x  
 At 32.5°C, flow = 8x

Figure 5. Direct pool/pond heating (modified from Rafferty 2004)

If the geothermal water cannot be used directly, due to health restrictions, then a heat exchanger is necessary to heat treated water for the pond or pool. Following the “rule of thumb” that the heated water to the pool should be 10°C above the pool temperature, then according to the previous example 40°C secondary water would have to be provided to the pool. Using a heat exchanger between the geothermal water and the secondary water an additional  $\Delta T$  of 5°C is required to accommodate the heat transfer between the geothermal water and the secondary water. Thus 45°C geothermal water would be required, and on the return side of the heat exchanger the geothermal reject fluid should be 5°C above the return temperature of the secondary water. Thus, the rule of thumb is 10/5/5 as listed below in Figure 6.

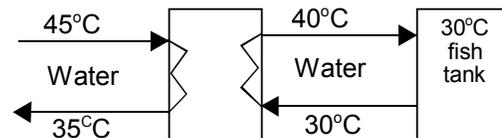


Minimum acceptable supply water temperature = process temp + 10°C  
 Maximum available supply water temperature = resource temp - 5°C  
 Minimum achievable geo leaving temp = process temp + 5°C

Figure 6. Pond/pool heating with heat exchanger (modified from Rafferty 2004)

## Greenhouse and Building Space Heating

Heating of greenhouses and buildings often involves the transfer of heat to the air in the structure using a water-to-air heat exchanger called a coil, usually consisting of finned copper tubes (Rafferty 2004). The simplest version of this application is shown in Figure 17. In order to heat the space, heated air should be delivered at least 15°C above the space temperature; 20°C is shown in the example. Thus the air should be delivered at 35°C or above from the water to the coil. The reason for the large difference, 15°C, is to limit the required quantity of air circulated to meet the heating requirements at reasonable levels. Also, as the difference becomes less, the fan and duct sizes become larger and the fan power consumption can be excessive. In addition, occupant comfort is important, as when the air supply drops below the 15°C difference the temperature of the air approaches human skin temperature, which results in a “drafty” sensation to the occupants, even at the desired air temperature. In addition, the geothermal water delivered to the water-to-air heat exchangers should be at least 10°C above the required air temperature to limit the size and cost of the heat exchanger. The same  $\Delta T$  is required between the leaving geothermal water and the return air temperature. Thus, to supply 20°C heat to the room, a geothermal resource temperature would have to be at least 45°C. The “rule of thumb” for this condition is then 15/10/10 as shown in Figure 7.

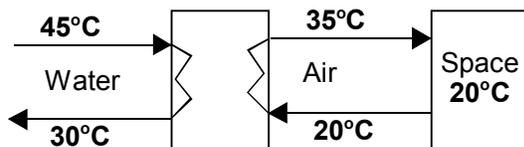


Minimum acceptable supply water temperature = space temp. + 15°C  
 Maximum available supply water temperature = geo. water temp. - 10°C  
 Minimum achievable geo. leaving temperature = return air temp. + 10°C

Figure 7. Space heating without isolation heat exchanger (modified from Rafferty 2004)

The example in Figure 7 assumes that the geothermal water is suitable to flow directly through the water-to-air heat exchanger (coil); however, if hydrogen sulfide is present, the gas will attack copper and solder in the coil, causing leakage and failure. Thus, in the case where the geothermal water must be isolated from the heating system equipment, a plate heat exchanger is normally placed between the two circuits to protect the heating equipment (Rafferty 2004). A plate heat

exchanger is then added to the left side of the equipment shown in Figure 7, resulting in the configuration shown in Figure 8. All the temperatures shown in Figure 7 are still valid; the difference is that the plate heat exchangers will require additional temperature input to maintain the space (home) temperature of 20°C. As in the previous example, a  $\Delta T$  of 5°C is required between the geothermal supply and the output from the secondary water. Thus, the new geothermal temperature required to meet the needs of the system is 50°C. The return geothermal water can only be cooled to 35°C as a result of the intermediate water loop return temperature of 30°C and the required 5°C  $\Delta T$ . This then provides of rule of thumb of 15/10/5 as shown in Figure 8.

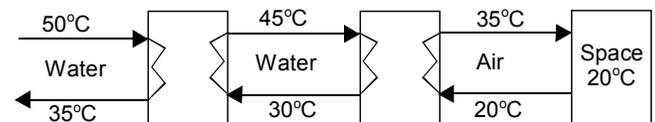

Supply air to space air = 15°C  
 Water/air heat exchanger = supply water to supply air of 10°C  
 Water/water heat exchanger = supply water to supply water of 5°C

Figure 8. Space heating 15/10/5 rule with geothermal isolation plate heat exchanger (modified from Rafferty 2004)

In summary, the following is provided by Rafferty (2004):

*All of the rules of thumb discussed here are exactly that. It is possible in all cases to “bend the rules” and design systems and equipment for temperatures closer than the guidelines provided. The values provided here are intended for initial evaluation of applications by those not in the practice of designing heating systems on a regular basis. The guidelines cited apply to new systems using commercially manufactured equipment. Homemade heat exchangers or existing equipment selected for water temperatures well above available geothermal temperature would require additional analysis.*

## CONCLUSIONS

There are many possible uses of geothermal fluids for direct-use; however a number of parameters can limit the choices and need to be determined in advance. First, what are the characteristics of the resource, i.e. temperature, flow rate, chemistry, and land availability?

Second, what markets are available and do you have the expertise to provide the product, whether it be heat energy, a crop of plants or fish, drying a product (lumber or food), or extracting a mineral from the fluid, and can you get the product to the user economically? Finally what are the capital investments, annual income, and rate of return on investment and/or payback period, and can you raise the funds or find investors?

Another alternative that can be considered to help improve the economics of a project and better utilize the resource is to consider a combined heat and power (CHP) project. Either project alone may not be feasible; however, together they may, even if the resource has a low temperature. See *Geo-Heat Center Bulletin*, Vol. 26, No. 2, (June) 2005 for more details and examples on CHP plants. All Geo-Heat Center Bulletins can be accessed from the Web site <http://geoheat.oit.edu>.

## **REFERENCES**

- Bloomquist, R.G.; Nimmons, J. T.; Rafferty, K. (1987). *District Heating Development Guide*. Vol. 1. Washington State Energy Office, Olympia, WA.
- Culver, G.G.; Lund, J.W. (1999). "Downhole Heat Exchangers." *Geo-Heat Center Quarterly Bulletin*. Vol. 20, No. 3, September.
- Dunstall, M. G.; Freeston, D.H. (1990). "U-Tube Downhole Heat Exchanger Performance in a 4-inch Well, Rotorua, New Zealand." Proceedings of the 12<sup>th</sup> New Zealand Geothermal Workshop. Geothermal Institute.
- Gudmundsson, J.S.; Lund, J.W. (1985). "Direct Uses of Earth Heat." *International Journal of Energy Research*. Vol. 9, No. 3, July-September. John Wiley & Sons, New York.
- Lienau, P. J. (1998). "Introduction," Chapter 1. Lund, J., ed. *Geothermal Direct-Use Engineering and Design Guidebook* Klamath Falls, OR: Geo-Heat Center.
- Lund, J.W. (2000). "Balneological Use of Thermal Waters." *Geo-Heat Center Quarterly Bulletin*, Vol. 21, No. 3, September. Rafferty, K. (2003). "Industrial Process and the Potential for Geothermal Applications." *Geo-Heat Center Quarterly Bulletin*. Vol. 24, No. 3, September.
- Rafferty, K. (2004). "Direct-Use Temperature Requirements: A Few Rules of Thumb." *Geo-Heat Center Quarterly Bulletin*. Vol. 25, No. 2, June.
- Ragnarsson, A.; Hrolfsson, I. (1998). "Akranes and Borgarfjordur District Heating System." *Geo-Heat*

*Center Quarterly Bulletin*. Vol. 19, No. 4, December.

Ryan, G. (1981). "Equipment Used in Direct Heat Projects." *Geothermal Resources Council Transactions*. Vol. 5, Davis, CA.

# REPORT DOCUMENTATION PAGE

*Form Approved*  
*OMB No. 0704-0188*

The public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing the burden, to Department of Defense, Executive Services and Communications Directorate (0704-0188). Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.

**PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ORGANIZATION.**

<b>1. REPORT DATE (DD-MM-YYYY)</b> January 2011			<b>2. REPORT TYPE</b> Conference Paper		<b>3. DATES COVERED (From - To)</b>	
<b>4. TITLE AND SUBTITLE</b> Development of Direct-Use Projects: Preprint				<b>5a. CONTRACT NUMBER</b> DE-AC36-08GO28308		
				<b>5b. GRANT NUMBER</b>		
				<b>5c. PROGRAM ELEMENT NUMBER</b>		
<b>6. AUTHOR(S)</b> J.W. Lund				<b>5d. PROJECT NUMBER</b> NREL/CP-5500-49948		
				<b>5e. TASK NUMBER</b> GT10.0400		
				<b>5f. WORK UNIT NUMBER</b>		
<b>7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES)</b> National Renewable Energy Laboratory 1617 Cole Blvd. Golden, CO 80401-3393				<b>8. PERFORMING ORGANIZATION REPORT NUMBER</b> NREL/CP-5500-49948		
<b>9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)</b>				<b>10. SPONSOR/MONITOR'S ACRONYM(S)</b> NREL		
				<b>11. SPONSORING/MONITORING AGENCY REPORT NUMBER</b>		
<b>12. DISTRIBUTION AVAILABILITY STATEMENT</b> National Technical Information Service U.S. Department of Commerce 5285 Port Royal Road Springfield, VA 22161						
<b>13. SUPPLEMENTARY NOTES</b>						
<b>14. ABSTRACT (Maximum 200 Words)</b> A geothermal direct-use project utilizes a natural resource, a flow of geothermal fluid at elevated temperatures, which is capable of providing heat and/or cooling to buildings, greenhouses, aquaculture ponds, and industrial processes. Geothermal utilization requires matching the varied needs of the user and characteristics of the resource in order to development a successful project. Each application is unique; guidelines are provided for the logical steps required to implement a project. Recommended temperature and flows are suggested for spas and pools, space and district heating, greenhouse and aquaculture pond heating, and industrial applications. Guidelines are provided for selecting the necessary equipment for successfully implementing a direct-use project, including downhole pumps, piping, heat exchangers, and heat convectors. Additionally, the relationship between temperature, flow rate, and the use of heat exchangers to provide heat to a space with hot water or hot air is provided for a number of applications, with suggested "rules of thumb".						
<b>15. SUBJECT TERMS</b> Geothermal; direct-use; greenhouses; aquaculture; heating and cooling						
<b>16. SECURITY CLASSIFICATION OF:</b>			<b>17. LIMITATION OF ABSTRACT</b> UL	<b>18. NUMBER OF PAGES</b>	<b>19a. NAME OF RESPONSIBLE PERSON</b>	
<b>a. REPORT</b> Unclassified	<b>b. ABSTRACT</b> Unclassified	<b>c. THIS PAGE</b> Unclassified			<b>19b. TELEPHONE NUMBER (Include area code)</b>	